

MODEL :- T96TW

**OPERATING MANUAL OF T96TW:- [4 -DIGIT THUMBWHEEL
TIMER]**

DO THE CONNECTIONS AS PER DIAGRAM GIVEN ON TOP OF BOX & SWITCH ON THE MAINS.

DISPLAY WILL SHOW SOME COUNT WHICH IS SET ON THUMBWHEEL SWITCH.

PUSH START KEY TO START THE TIMER. (IT HAS POWER ON START FACILITY ALSO WHICH IS FACTORY SET & NOT USER SELECTABLE).

IF ONE HAS TO HOLD TIME IN BETWEEN THEN PUSH HOLD/SET KEY ONCE,DISPLAY WILL HOLD AT CURRENT TIME.TO START IT AGAIN FROM HOLD TIMR PUSH START KEY,TIMER WILL START COUNTING FROM HOLD TIME.

IF ONE HAS TO CHANGE TIME IN BETWEEN & WANT TO START TIMER WITH NEW TIME THEN CHANGE SET TIME BY CHANGING THUMBWEEL NUMBER , PUSH HOLD/SET KEY TWICE.ON FIRST PUSH DISPLAY WILL HOLD TO CURRENT TIME & ON SECOND PUSH DISPLAY WILL GO TO NEW SET TIME.TO START THE TIMER WITH NEW SET TIME PUSH START KEY.

THIS TIMER HAS EXTERNAL START KEY ALSO.SO ONE CAN START THE TIMER WITH POTENTIAL FREE NO CONTACT.

SPECIFICATIONS:

- 1) DISPLAY :- AVAILABLE IN 2-DIGIT,3-DIGIT,4-DIGIT , 0.5 INCH SEVEN SEGMENT RED LED DISPLAY.
- 2) EXTERNAL START.
- 3) TIMER RANGE :- 0.1-999.9,1-999 SEC,MIN,HRS.(FACTORY SET)
- 4) RELAY OUTPUT:- 2 C/O , 5AMP CONTACT FOR RESISTIVE LOAD.
- 5) RUN MODE INDICATION WITH 3 MM RED LED .
- 6) SIZE:- AVAILABLE IN 72 * 72, 96 * 96 SIZE.
- 7) POWER ON START & EXTERNAL/KEY START OPTION (FACTORY SET)
- 8) OPERATING VOLTAGE :- 230V AC , 50 HZ , ±15 %.